
Explosion-proof Emergency LED Driver Programming Guide

LED Driver: Explosion-proof Emergency LED Driver

Programmer: MSSL200

 



Software: Programmable Driver Configurator Software_V2.10

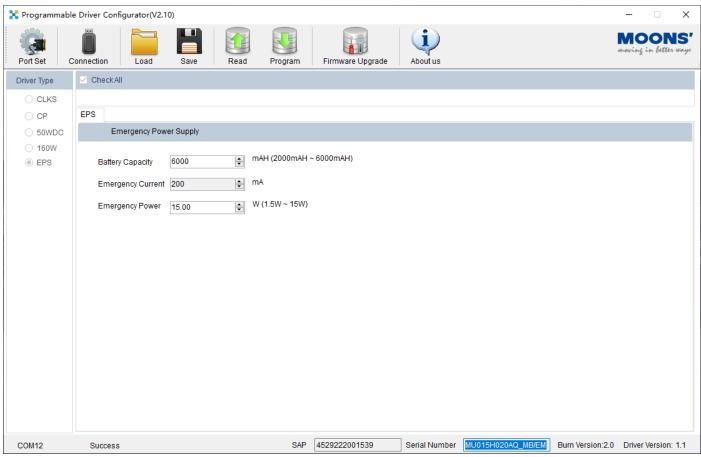



1. Install USB Driver of Smartkey


Operate "CDM v2.12.00 WHQL Certified" as administrator.



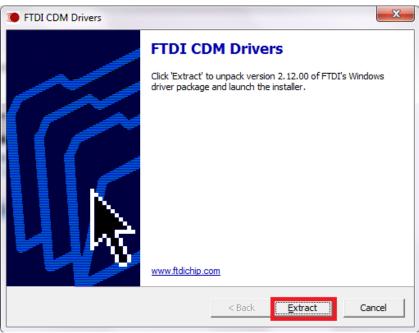

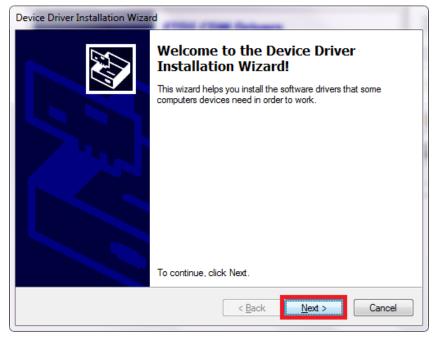


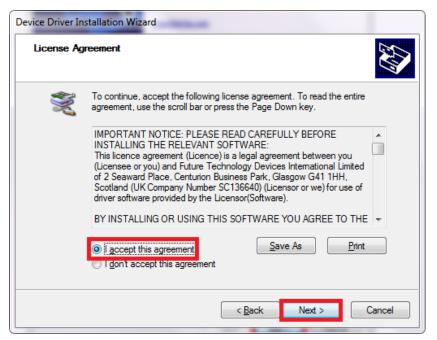

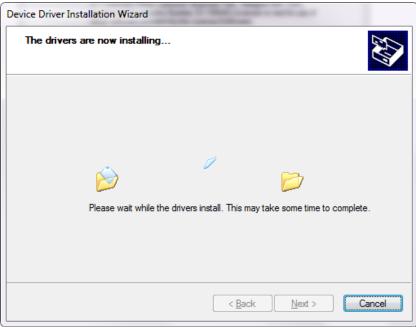






When programmer connect to PC's USB port, PC will cost few seconds to recognize programmer's port number.

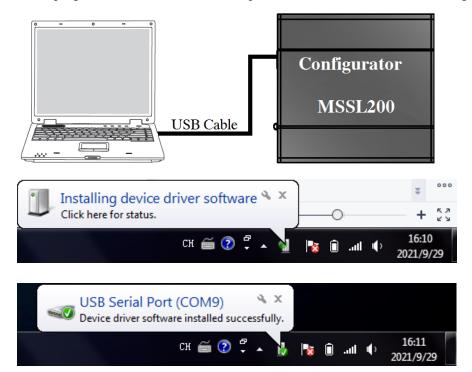


 Next please enter computer manage device



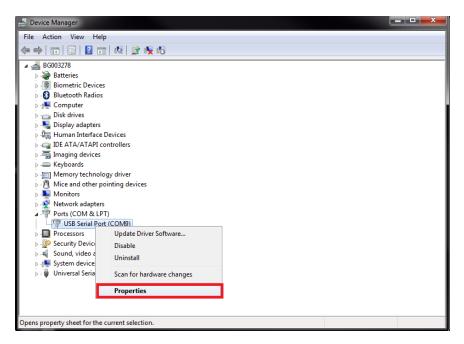


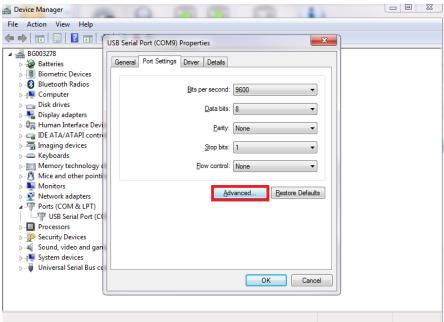

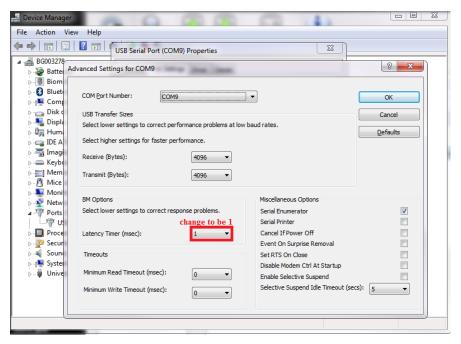

And then click OK to save.

2. Complete wiring

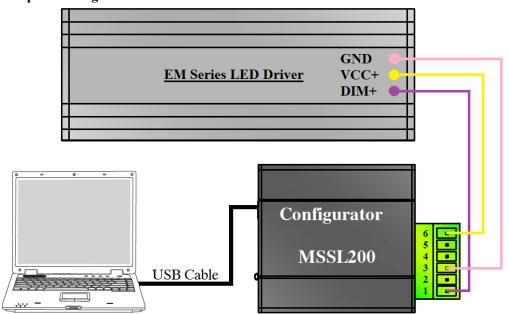

3. Operating software and start to program LED driver

Programmable Driver Configurator.exe

Programmable Driver Configurator.exe.config

Programmable Driver Configurator.pdb

stdole.dll

